



# ViewTech Borescopes Non-Slip Grip

Specifically designed for your VJ-3 video borescope stand is a non-slip grip. If you wish to apply it, follow the simple directions listed below.

## Step 1

Clean the base metal plate with a surface cleaner (DO NOT use methylated spirits, gasoline, lighter fluid, etc.) as these leave behind a thin, greasy residue. We recommend rubbing alcohol.

## Step 2

Only apply when the temperature is above 50°F or 10°C. Applying the non-slip grip to a surface temperature under 50°F or 10°C will not allow the adhesive to stick to the surface it is being applied to.

## Step 3

Peel back part of the release liner then press the adhesive firmly onto the bottom corner, just over the metal plate border. Slowly keep pulling back the liner while applying the non-slip grip, making sure it is not stretched or air pockets are visible.


## Step 4

Once applied, press the non-slip grip down firmly using even pressure. If correctly applied, the non-slip grip can be used instantly, with maximum benefit from the adhesive system after 48 hours.


### Step 1



### Step 2

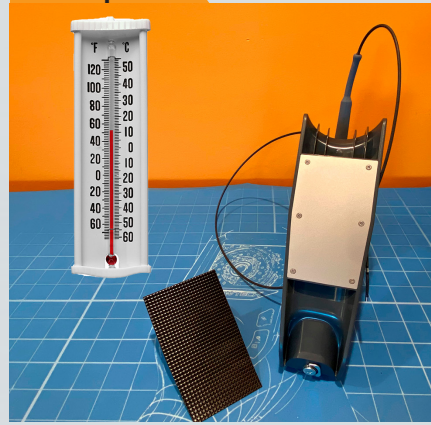

### Step 3

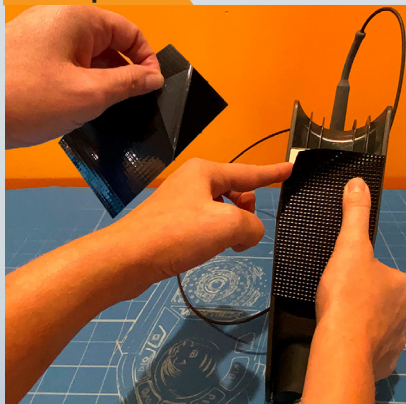

### Step 4

